

DOCUMENT: HOLDEN HT & HG

Note: This label will only fit models, with a visible needle-stop on the speedometer face. | Part No 2004

To suit

HOLDEN HT-&-HG

FITTING INSTRUCTIONS FOR APPLICATION OF METRIC CONVERSION LABEL TO SUIT HOLDEN 'HT' & 'HG'.


- 1** Disconnect the battery ground cable to avoid the possibility of shorts.
- 2** Remove the windscreen wiper switch knob. (a).
- 3** Remove the air cleaner housing then free the choke cable at the carburettor by loosening the retaining screws. Pull choke knob out approximately six inches (6") and undo retaining nut. (for automatic choke models, remove facia retaining nut only in this step).
- 4** Turn ignition switch (with key) to ACC. position and pull out key cylinder assembly by inserting pin into release hole. Undo bezel nut. (b).
- 5** Press release button on rear of light switch with knob in full ON position, and pull light switch knob completely out. (c).
- 6** Remove three facia panel retaining screws. (d).
- 7** Reach behind dashboard and unscrew speedometer cable nut.
- 8** On manual and floor control automatic transmission models, release the two spring clips holding the decorative insert around steering column and remove insert. On column shift automatic transmission models, release the two spring clips holding the shift indicator housing and free the housing from the facia moulding and leave resting on the steering column.
- 9** Lift the facia straight up towards the top of the steering column, then roll out to the left of the steering column.
- 10** Remove the eight screws from the perimeter of the backing plate. Facia is now free from instruments and may be left suspended from choke cable.

- 11** Remove the speedometer retaining system at the rear of backing plate and remove speedometer assembly.

N.B. At this stage ensure hands are clean before continuing.

- 12** Wipe dial with clean dry cloth.
- 13** Peel backing paper off conversion label and align label. Smooth out any wrinkles or air bubbles.

Holden models, without a visible needle-stop
Peel backing paper off small label and adhere into position around hand brake indicator. Now remove backing paper from horse-shoe shaped label, align straight edges to small label and adhere around speedometer face. Smooth out wrinkles or air bubbles.

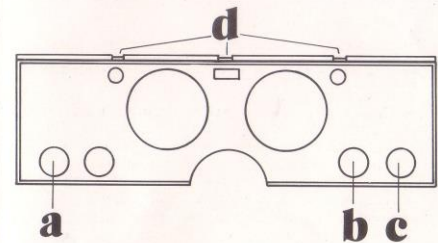

- 14** Reverse steps 11. to 1.

N.B. Ensure all globe assemblies are in position (wire colour is printed on rear of backing plate adjacent to their respective holes), before reintroducing facia into dashboard.